# 🏵 VAISALA

# HMT330MIK Meteorological Installation Kit



The HMT337 with warmed probe installed with the HMT330MIK kit is the right choice for reliable humidity measurement in humid weather conditions.


The Vaisala Meteorological Installation Kit HMT330MIK enables the Vaisala HUMICAP<sup>®</sup> Humidity and Temperature Transmitter HMT337 to be installed outdoors to obtain reliable measurements for meteorological purposes.

## True humidity readings in condensing conditions

In weather observations dew formation makes reliable humidity measurement difficult. When dew has formed on the humidity sensor, it is impossible to obtain a true reading until this dew evaporates.

The HMT337 avoids this problem by warming the probe. When warmed, the relative humidity inside the probe stays below the ambient level. With an accurate temperature measurement, the ambient dewpoint can be calculated precisely. To obtain the ambient relative humidity, an additional probe measures the ambient temperature, and the transmitter calculates the relative humidity from the dewpoint and temperature values.

#### **Open shield prevents**

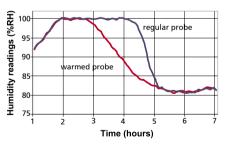

After a period of 100 % relative humidity, the warmed probe measures the true humidity, whereas the non-warmed probe takes time to recover from the condensation.

#### microclimates

The warmed humidity probe of the HMT337 is mounted in a shield which is open at the bottom to ensure steady air circulation to the sensor even in calm weather.

In traditional radiation shields sleet or snow can accumulate on the shield

#### **Features/Benefits**

- For outdoor humidity and temperature measurements
- Can be ordered in a variety of configurations
- Used together with HMT337 transmitter

#### HMT337 Features

- Warmed probe provides true humidity readings in condensing conditions
- Humidity measurement expressed as relative humidity and/or dewpoint temperature
- Easy field calibration with the HM70 hand-held meter
- Vaisala SPH 10/20 Static Pressure Head eliminates effectively pressure variations in the barometer caused by wind

and prevent the proper air circulation through the shield, and create a humid microclimate until the snow melts.

### Essential for critical weather measurements


Obtaining a true humidity reading is particularly important e.g. in traffic safety: at airports and at sea as well as on the roads. It is essential, for example, in fog and frost prediction.



For calibration, a portable HMP77 reference probe is easy to attach beside the HMT337 probe.

#### Dimensions

Dimensions in mm (inches).

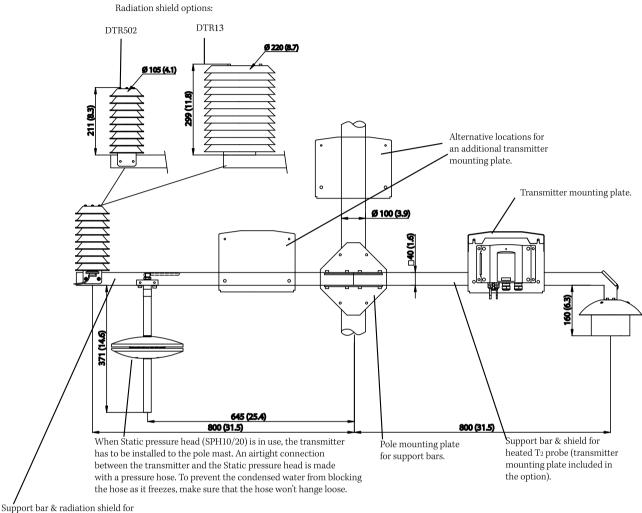

additional T probe or for non-heated RH probe or T<sub>2</sub> probe.

#### **Order form**

Vaisala Meteorological Installation Kit	НМТ330МІК				
Support bar & shield for warmed Td probe	No support bar & shield for warmed Td probe	0			
	Support bar, transmitter mounting plate & shield for warmed Td probe	1			
Support bar and radiation shield for	No support bar or radiation shield		A		
additional T probe or for	Support bar with DTR502 shield for T probe		3		
on-warmed RH or Td probe	Support bar with DTR13 shield for T probe	(	2		
	Support bar with DTR502 shield for non-warmed RH or Td probe	l	2		
	Support bar with DTR13 shield for non-warmed RH or Td probe		=		
Support bar mounting plate	No mounting plate		0		
	Pole mounting plate for support bar/bars		1		
Additional transmitter mounting plate	No additional transmitter mounting plate			Α	
	Transmitter mounting plate for support bar assembly			В	
	Transmitter mounting plate for pole assembly			С	
Static Pressure Head	No Static Pressure Head				
	Static Pressure Head SPH10				