

Quick Guide

ASM215638SP Magnetic Bracket

Supported HMDW110 and HMDW80 transmitter models

The ASM215638SP Magnetic Bracket accessory is intended for use with the following wall mount transmitters:

- HMDW110 transmitter series wall mount models HMW110, HMW112D, TMW110, and TMW112D
- HMDW80 transmitter series wall mount models HMW88D, TMW88, and HMW89D

The magnetic bracket cannot be used with the following models: HMW82, HMW82P100, TMW82, HMW83, and TMW83.

Attaching the magnetic bracket to transmitter

Attach the magnetic bracket to the back of the transmitter as shown in [Figure 1 \(page 1\)](#).

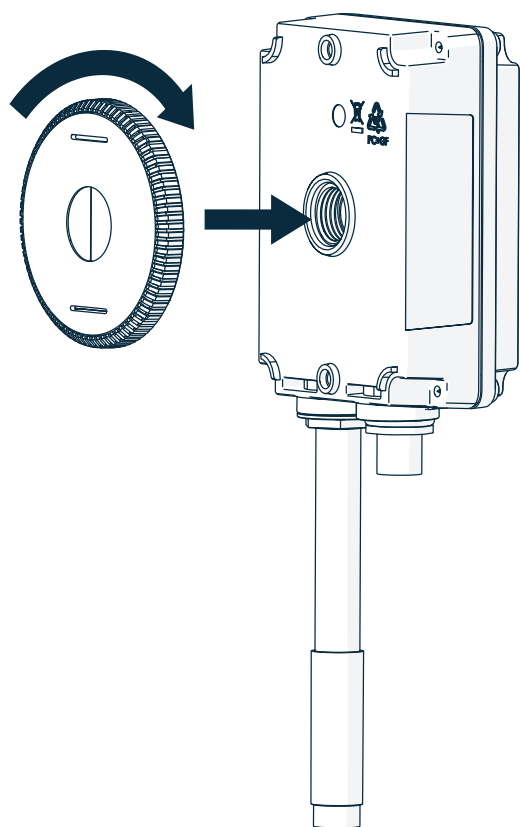


Figure 1 Attaching the magnetic bracket to transmitter

1. Insert the screw of the magnetic bracket into the threads at the back of the transmitter.
2. Rotate the magnetic bracket clockwise to attach it to the threads on the transmitter. Tighten to finger tightness.



NOTICE! This accessory has a strong magnet. Handle the magnet with care and keep it away from devices that are sensitive to magnetic fields (for example, pacemakers, magnetic cards, and mechanical watches).



PUBLISHED BY
Vaisala Oyj
Vanha Nurmijärventie 21
FI-01670 Vantaa, Finland
© Vaisala 2024

All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. Any reproduction, transfer, distribution or storage of information contained in this document is strictly prohibited. All specifications — technical included — are subject to change without notice.

VAISALA

More information

For full instructions on installing, using, configuring, and maintaining HMDW110 series and HMDW80 series transmitters, see the following documents at the Vaisala documentation portal docs.vaisala.com:

- [HMDW110 with TMI110 User Guide M211726EN](#)
- [HMDW80 Series User Guide M211510EN](#)

Recycling



Recycle all applicable material according to local regulations.