


Quick Guide

GMP252 Accessory DTR250 Radiation Shield

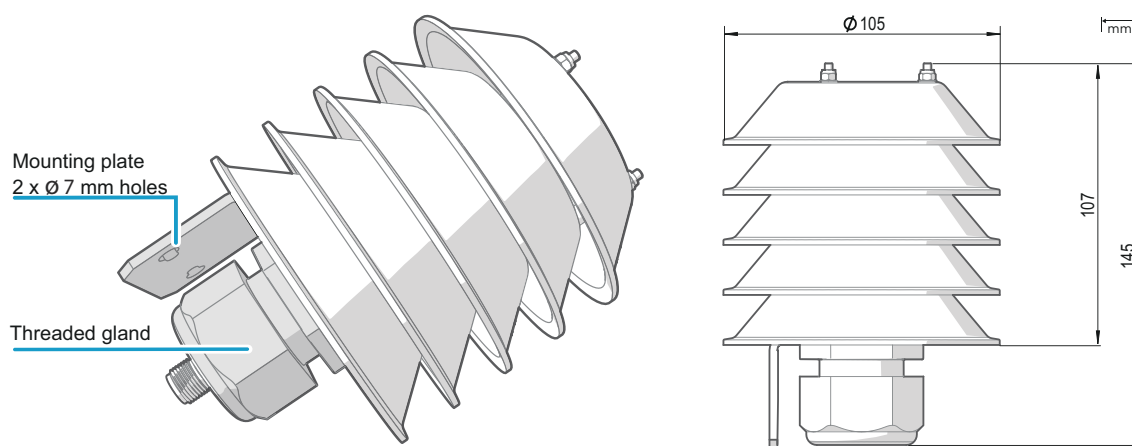

Installing DTR250 Radiation Shield

The optional DTR250 radiation shield (Vaisala order code: DTR250) for Vaisala CARBOCAP® Carbon Dioxide Probe GMP252 protects the probe from solar radiation and precipitation in outdoor installations. To install the probe with the radiation shield:

- ▶ 1. Screw open the threaded gland of the radiation shield.
2. Insert the probe into the shield until it meets the top of the shield (only the connector of the probe remains visible) and screw the gland shut.
3. Mount the probe and shield with 2 screws (Ø 7 mm) so that the connector of the probe points directly downwards.



The threaded gland does not need to be detached when inserting the probe, only loosened by a couple of turns.

Table 1 Specifications

Property	Specification
Radiation shield material	Radiation-resistant polycarbonate (PC)
Weight	• Radiation shield: 286 g • Radiation shield + GMP252 probe: 344 g
Chemical tolerance (cleaning)	• Alcohol-based cleaning agents (for example, ethanol and IPA) • For other cleaning chemicals, verify compatibility with polycarbonate before use



PUBLISHED BY
Vaisala Oyj
Vanha Nurmijärventie 21
FI-01670 Vantaa, Finland
© Vaisala 2022

All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. Any reproduction, transfer, distribution or storage of information contained in this document is strictly prohibited. All specifications — technical included — are subject to change without notice.

VAISALA